


DISH 211 RCA Cable Connections

NOTE: The devices shown below are for EXAMPLE ONLY.

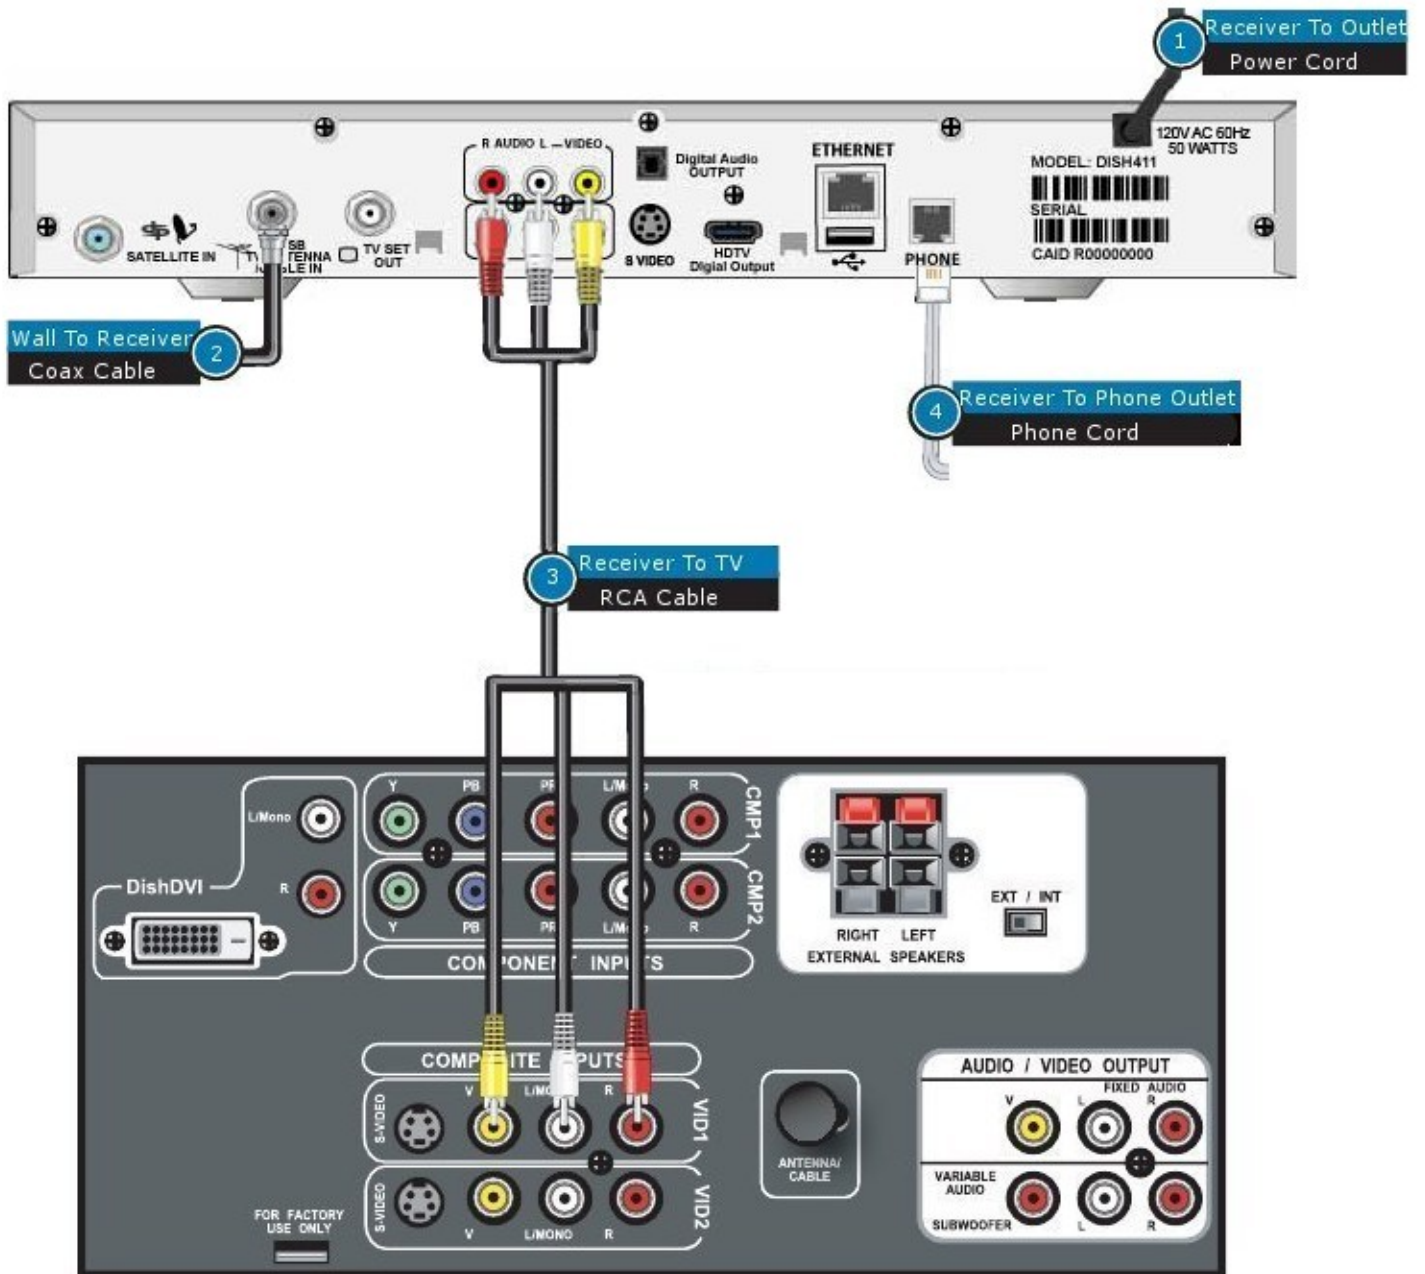

If you are having trouble or need further assistance, please call (866) 876-3278